



[www.jbctools.com](http://www.jbctools.com)

## INSTRUCTION MANUAL



# NANE

2-Tool Nano Soldering Station

This manual corresponds to the following references:

- **NANE-9C** (100V)
- **NANE-1C** (120V)
- **NANE-2C** (230V)

## Packing List

The following items are included:



**Nano Control Unit** ..... 1 unit



**Nano Handle** ..... 2 units  
Ref. NT115-A



**Cable Collector and Stand** ..... 2 units  
Ref. CC2002



**Brass Wool** ..... 1 unit  
Ref. CL6210



**Metal Brush** ..... 1 unit  
Ref. CL2466



**Power Cable** ..... 1 unit  
Ref. 0024092 (100V)  
0023715 (120V)  
0023714 (230V)



Ref. 0020952  
includes:  
Ref. C115-101 x1  
C115-103 x1  
C115-107 x1  
C115-112 x1

Ref. 0020953  
includes:  
Ref. C115-105 x2  
C115-113 x2

**Cartridge dispenser Case** ..... 2 units  
Ref. 0020952 / Ref. 0020953



**Allen key** ..... 1 unit  
Ref. 0009848




**Pedal**..... 1 unit  
Ref. P-405




**Manual** ..... 1 unit  
Ref. 0027179

# Features and Connections

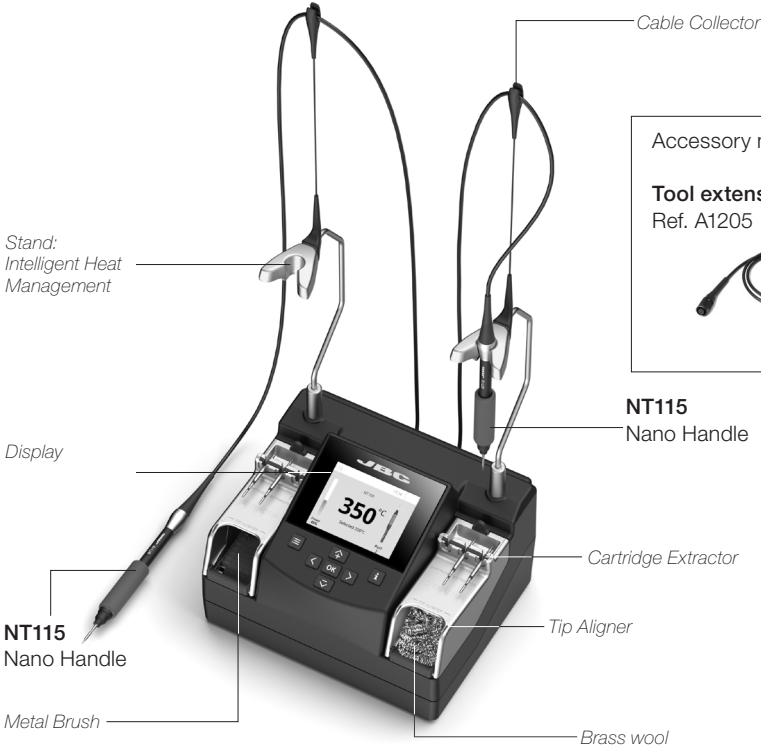


Accessory not included:

**Tool extension cord (1m)**  
Ref. A1205

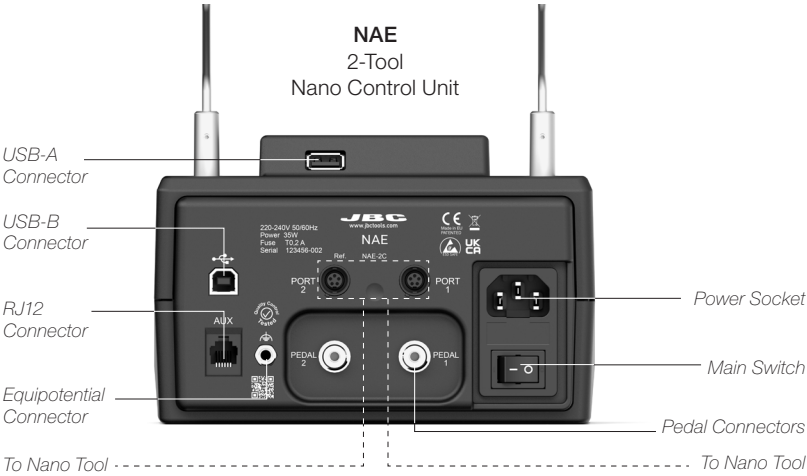


# Tool Holder Assembly

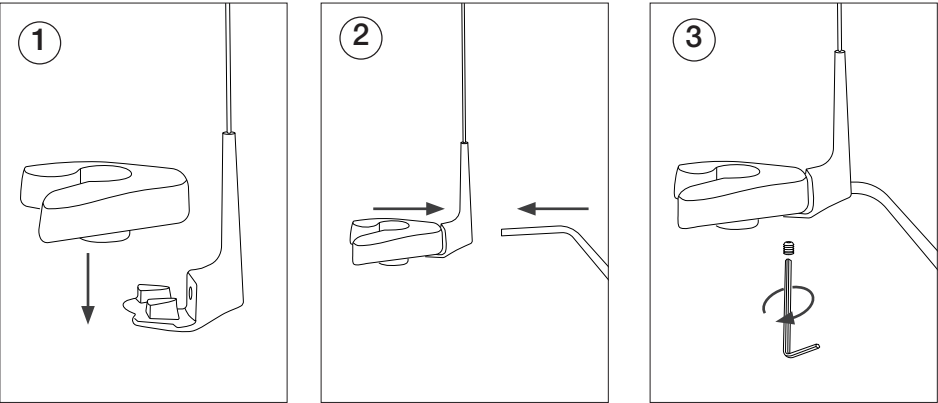


# Tool Holder Replacement

Loosen the screw (1) and withdraw the tool holder (2).

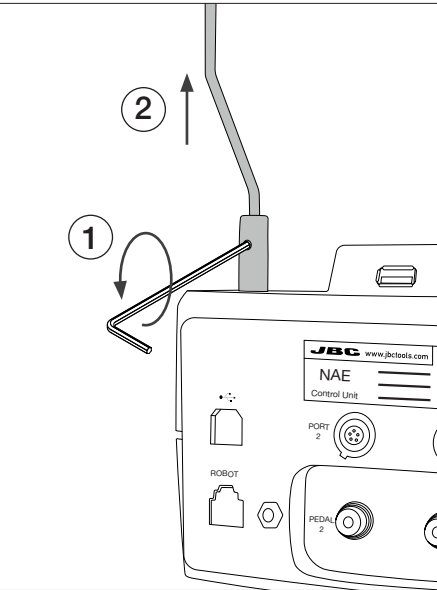


Insert the new tool holder (3) and tighten the screw (4).

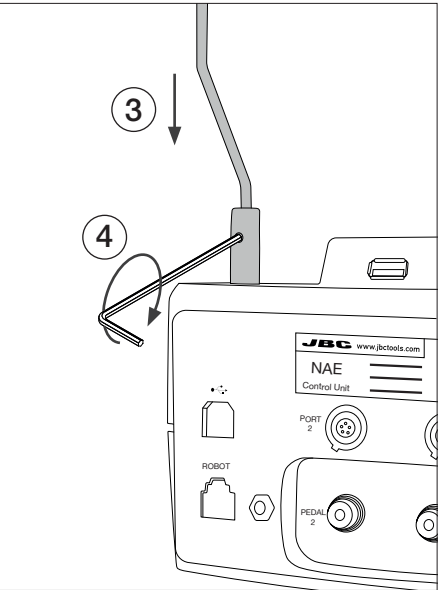



## Work Screen

The work screen offers an **intuitive user interface** which provides **quick access** to station parameters. **Default PIN: 0105**

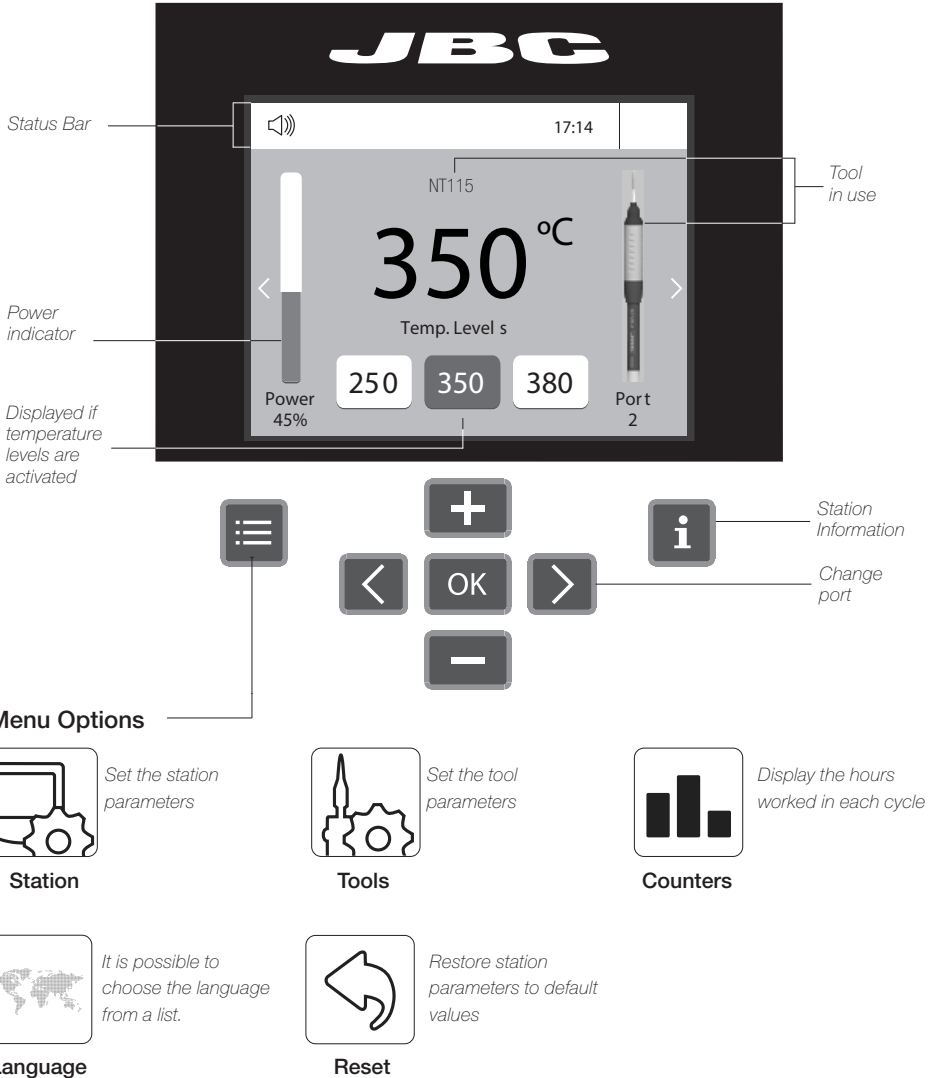

## Troubleshooting

Station troubleshooting available on the product page on [www.jbctools.com](http://www.jbctools.com)

# Advanced Functionalities



Graphics

It provides detailed graphics of tip temperature and power delivery in real time during solder joint formation for analysis purposes. This helps you decide how to adjust your process or which tip to use to obtain the best quality soldering.



Profiles

Designed to avoid thermal shock when soldering Ceramic Chip components like MLCC, this new and unique feature allows controlling the heating rate to gradually increase the temperature of the component through all the phases of the soldering process. Up to 25 fully configurable soldering profiles can be stored.



Files

## Export graphics


Insert a USB flash drive into the USB-A connector to save your soldering process in csv format.



Update

## Station update

Download the JBC Update File from [www.jbctools.com/software.html](http://www.jbctools.com/software.html) Insert the USB flash drive with the file downloaded to the station.

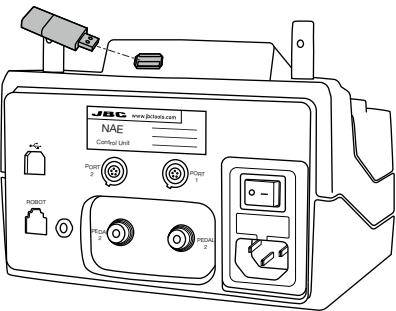

# System Notifications

The following icons will be displayed on the screen's status bar.



USB flash drive is connected.



Station is controlled by a PC.



Station is controlled by a robot downloaded to the station.



Station software update. Press INFO to start the process.



Warning. Press INFO for failure description.




Error. Press INFO for failure description, the type of error and how to proceed.

## Operation


### JBC's Exclusive Heating System

This revolutionary technology is able to recover tip temperature extremely quickly. This allows the user to work at a lower temperature. As a result, tip life increases by 5.

#### 1. Work

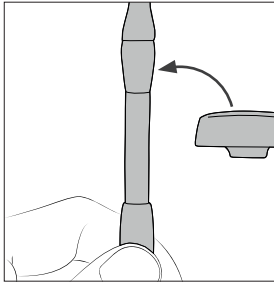

When the tool is lifted from the holder the tip will heat up to the selected temperature.

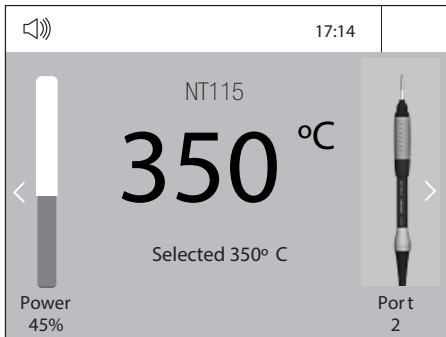


*Tool Settings:*  
· *Operating Temp. and Temp. Levels*


Press , select *Tool Settings* and activate the *Temp. Levels* option. Change Work temperature and Temp. Levels from 90 to 450 °C.

 or  steps of  $\pm 5$  °C / °F

#### 2. Hibernation

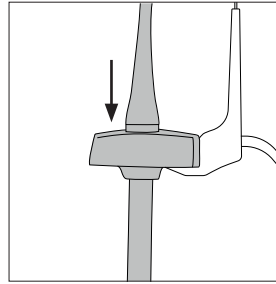

When the tool is in the holder, the power is cut off and the tool cools down to room temperature.

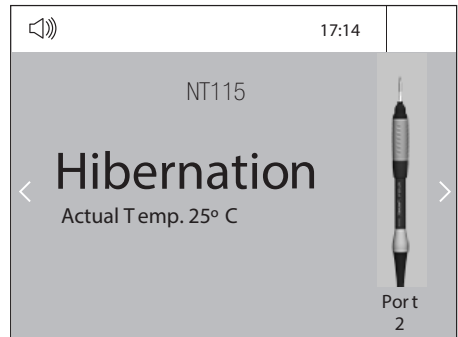

*Tool Settings:*  
· *Hibernation*


Change Hibernation delay from 0 to 60 min or no Hibernation.

# Example: Chip Components Rework Process using Tweezers and Pedal

Tweezers are not included. They are available on [www.jbctools.com](http://www.jbctools.com)

The Pedal is frequently used to rework components with tweezers.

AN115, JBC's Adjustable Nano Tweezers, is the most effective tool for desoldering chip components but also it facilitates its rapid placement and soldering by using P405 pedal connected to JBC's NAE Control Unit.

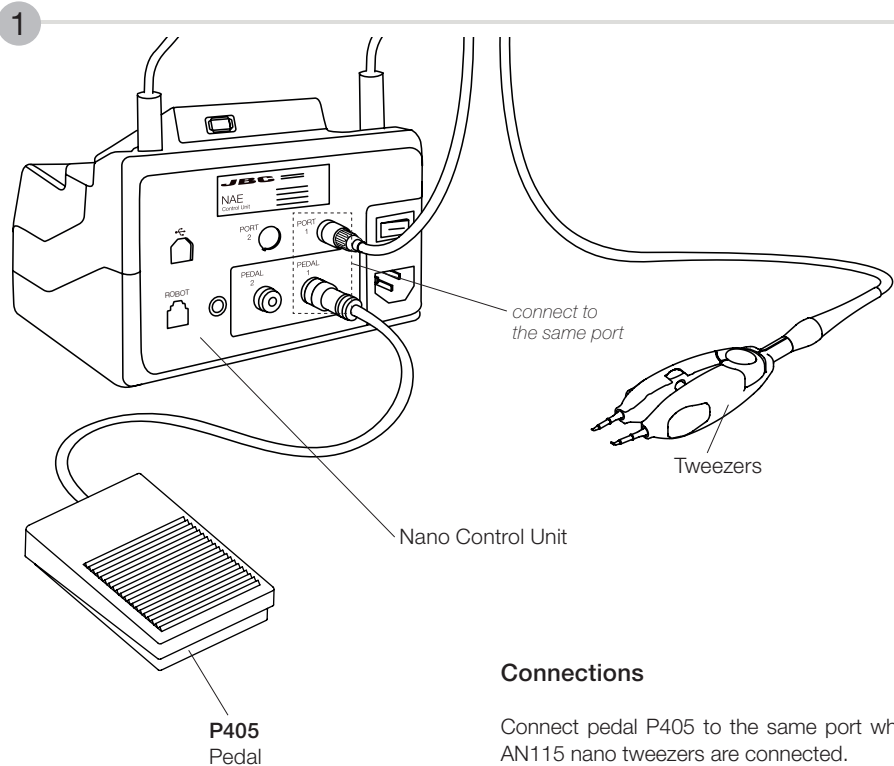


## Connections


Connect pedal P405 to the same port where AN115 nano tweezers are connected.

In the peripherals menu for the "Pedal Activation Mode" choose between "pressed" and "released".

2

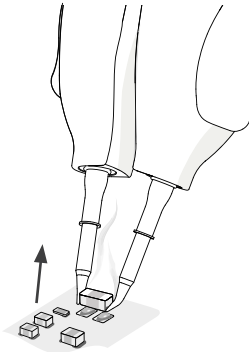

\* "Press Mode" previously selected

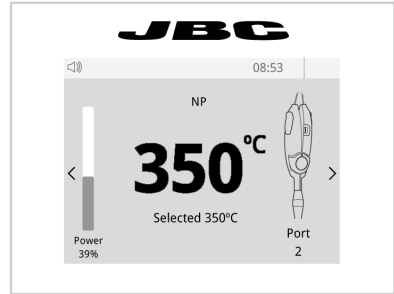


## Desoldering\*

Lift the tweezers from the holder, press and hold the pedal to activate the tweezers and desolder the component.

Once the pedal is released the tweezers enters in hibernation mode and cools down.

3

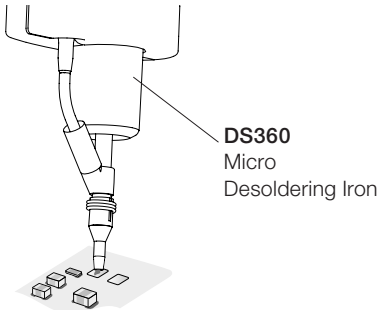


## Pad Cleaning

Clean the pads with JBC's desoldering tool DS360.

For this operation JBC's desoldering station DSS is needed.

4


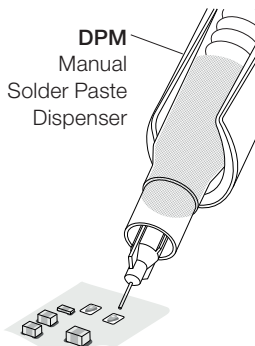


## Solder Paste Dispensing

Apply the solder paste amount needed to solder the new chip component.

The use of JBC's DPM solder paste dispenser is recommended.

5

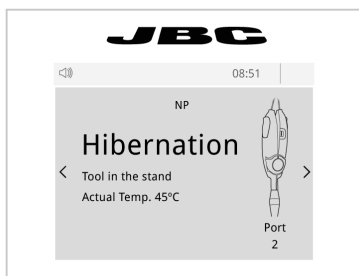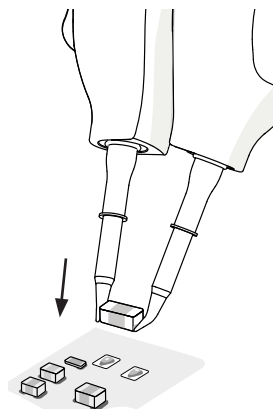

### Placing



Do not press the pedal.

Use the tweezers to position the component on the previously tinned pad.

#### Note:

The inactive tweezers prevents the component from heating up prematurely.

6

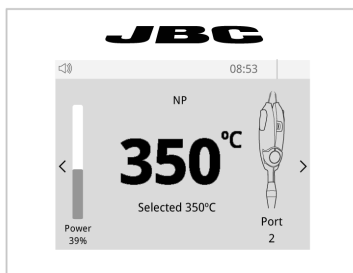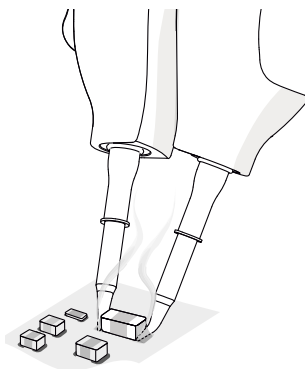


### Soldering

Once in position press and hold the pedal to activate the tweezers and perform the soldering.

## Changing Cartridges


Save time and change cartridges safely without having to switch the station off.

### Removing

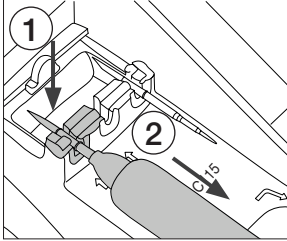


Place the cartridge into the extractor slot (1) and pull the handle to remove the cartridge (2).

### Inserting

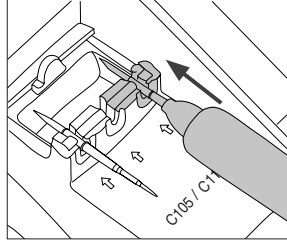


Push the new cartridge into the handle until the reference ring\*.

### Aligning

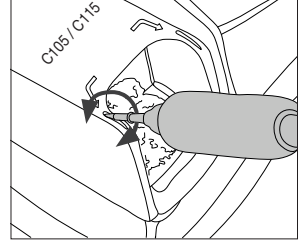


Use the holes to rotate the cartridges for proper alignment.

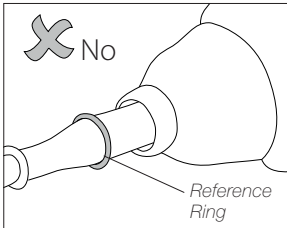

### \*Important

It is essential to insert the cartridges up to the reference ring for a proper connection.

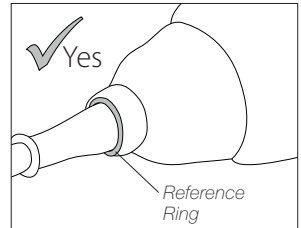

## Compatible Cartridges

Nano Handle **NT115** works with **C115** cartridges. Find the model that best suits your soldering needs at [www.jbctools.com](http://www.jbctools.com)



Conical



Conical bent



Chisel



Bevel



Knife



Blade



Spoon



Conformal Coating Removal


# Changing Grips

## 1. Inserting

First, put the slide-on tabs into the new grip, then push the grip with the tabs onto the handle.

Grip for NT115  
Ref. N8662


Nano Handle

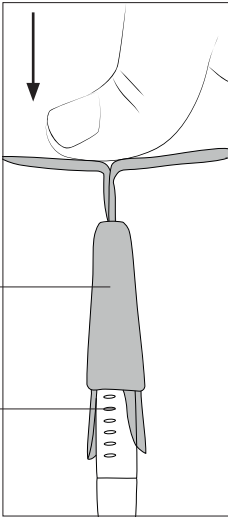


## 2. Removing Tab

Hold the grip and pull the tab. Use pliers if necessary.


Tab

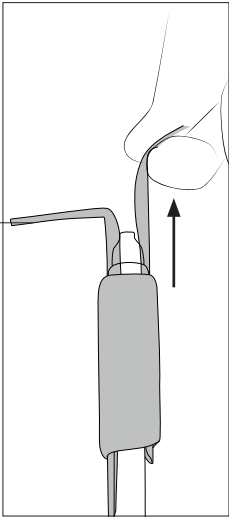

# Changing the Tip Cleaning System

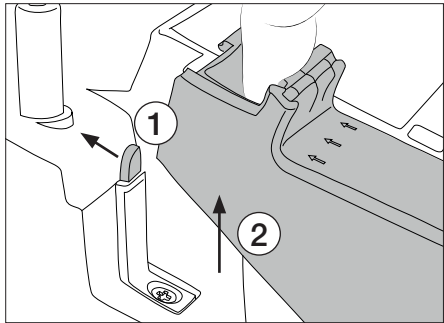


Press back the tap (1) to remove the cleaning system (2).

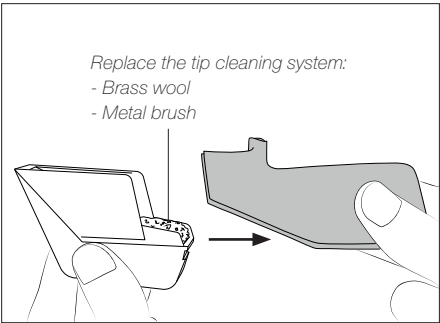


Remove the drawer from the splashguard.



# Menu Options

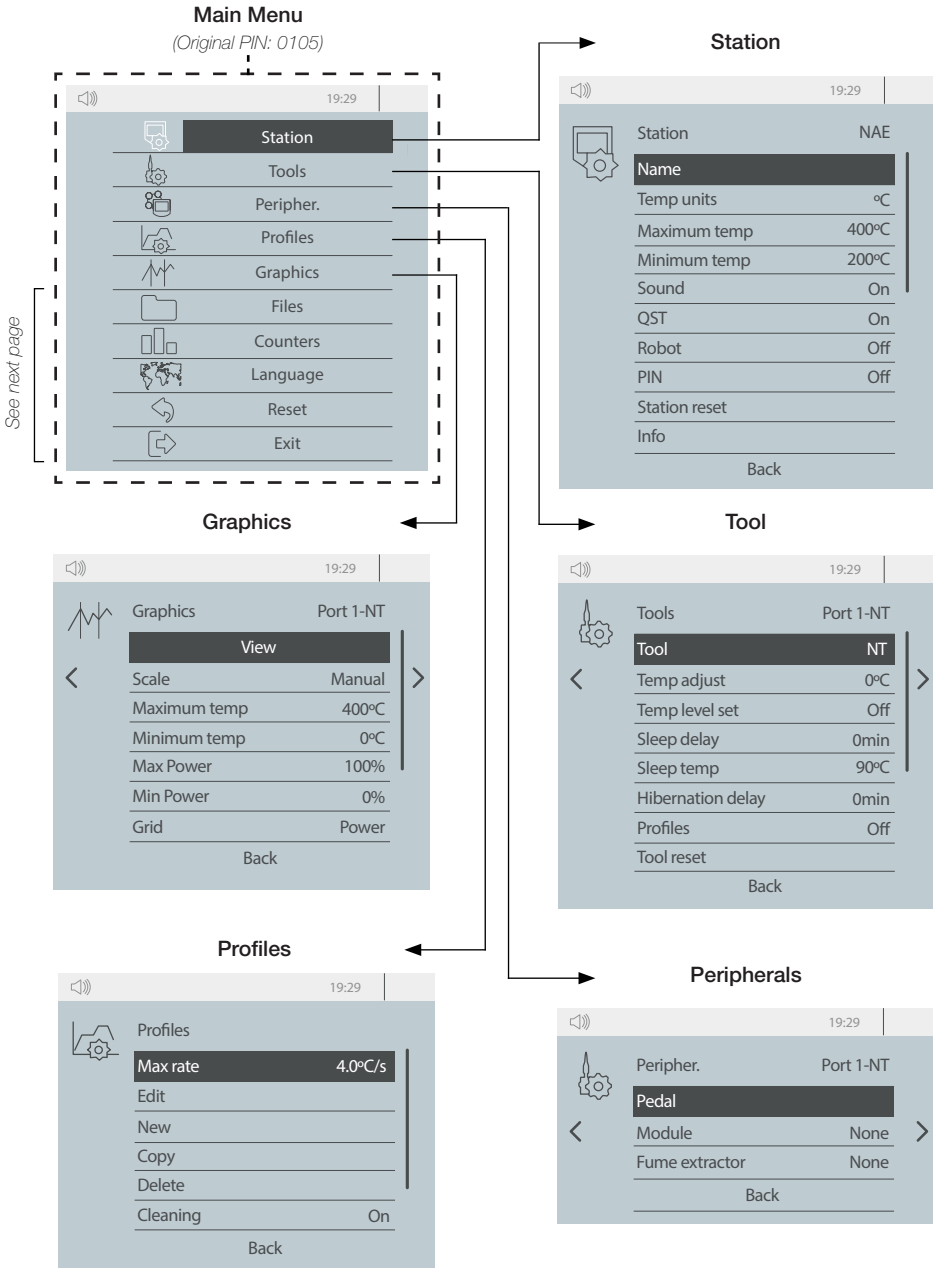

# Menu Options

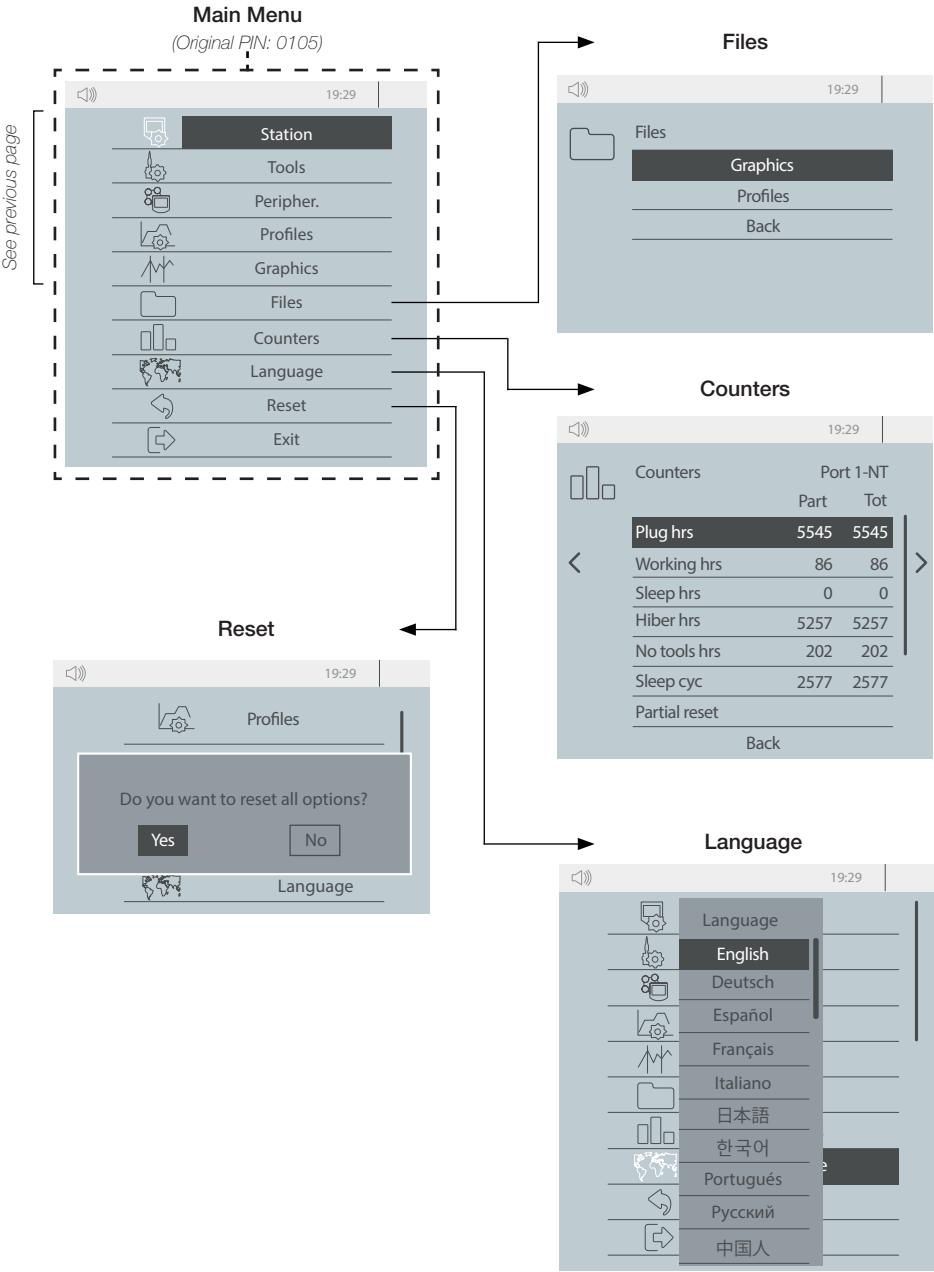

## Station

| Setting                        | Description                                                                                                                                                                                                |
|--------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Name                           | Allows to modify the station identifier.                                                                                                                                                                   |
| Temp. Units                    | Allows to change the unit of temperature measurement: Celsius degrees or Fahrenheit degrees.                                                                                                               |
| Maximum Temp.<br>Minimum Temp. | Select the maximum/minimum temperature that can be set for the Work Mode.                                                                                                                                  |
| Sound                          | Disable or enable the key sound.                                                                                                                                                                           |
| QST                            | Enable or disable communication via USB connector for QST (Quality Soldering Traceability) libraries, available on JBC's website.                                                                          |
| Robot                          | Disable or enable remote control with robot.                                                                                                                                                               |
| PIN                            | Allows to lock the parameters of the station using a four-digit code. The default code is 0105, but a new code can be set by simply entering some other four digits of choice when locking the parameters. |
| Station Reset                  | Restore the station settings to default.                                                                                                                                                                   |
| Info.                          | Check specifications and information about the station.                                                                                                                                                    |

## Tool

| Setting           | Description                                             |
|-------------------|---------------------------------------------------------|
| Tool              | Set the connected tool to a specific port.              |
| Temp. Adjust.     | Applies a positive/negative offset to the temperature.  |
| Temp. Level Set   | Enable or disable temperature levels.                   |
| Sleep Delay       | Set Sleep delay from 0 to 9 min.                        |
| Sleep Temp.       | Set Sleep temperature from 90 to 450 °C / 190 to 840 °F |
| Hibernation Delay | Set Hibernation delay from 0 to 60 min.                 |
| Profiles          | Allows to create soldering profiles.                    |
| Tool Reset        | Restore the tool settings to default.                   |

## Peripherals

| Setting        | Description                                                 |
|----------------|-------------------------------------------------------------|
| Pedal          | Configure the settings of connected pedals (for each port). |
| Module         | Unused feature.                                             |
| Fume Extractor | Disable or enable a fume extractor for each port.           |

## Profiles

| Setting   | Description                                                              |
|-----------|--------------------------------------------------------------------------|
| Max. Rate | Select the max./min. rate (per second) that can be set in profiles mode. |
| Edit      | Edit an already existing profile.                                        |
| New       | Create a new profile.                                                    |
| Copy      | Duplicate a profile.                                                     |
| Delete    | Delete a profile.                                                        |
| Cleaning  | Disable or enable cleaning time when working with a soldering profile.   |

## Graphics

| Setting                        | Description                                                          |
|--------------------------------|----------------------------------------------------------------------|
| Scale                          | Set automatically or manually the scale of the graphics temperature. |
| Maximum Temp.<br>Minimum Temp. | Select max./min. temperature of the graphics scale (manual mode).    |
| Max. Power<br>Min. Power       | Select max./min. power supplied to the tool in %.                    |
| Grid                           | Adjust the graphics grid according to temperature or power.          |

## Files

| Setting  | Description                                 |
|----------|---------------------------------------------|
| Graphics | Export or delete temperature graphics.      |
| Profiles | Export/Import or delete soldering profiles. |

## Counters

| Setting       | Description                                                        |
|---------------|--------------------------------------------------------------------|
| Plug Hrs.     | Check how many hours the station has been on.                      |
| Working Hrs.  | Check how many hours the station has been running in Work Mode.    |
| Sleep Hrs.    | Check how many hours the station has been in Sleep Mode.           |
| Hiber. Hrs.   | Check how many hours the station has been in Hibernation Mode.     |
| No Tool Hrs.  | Check how many hours the station has been with no tools connected. |
| Sleep Cycles  | Check the number of sleep cycles the station has gone through.     |
| Partial Reset | Resets all partial counters on the Part column.                    |

## Language

| Setting  | Description                                                                                                                                 |
|----------|---------------------------------------------------------------------------------------------------------------------------------------------|
| Language | Allows to change the software language between English, Spanish, German, Italian, French, Chinese, Korean, Portuguese, Russian or Japanese. |

## Reset

| Setting | Description                                   |
|---------|-----------------------------------------------|
| Reset   | Reset every parameter and setting to default. |


## Maintenance

Before carrying out maintenance, always switch the device off and disconnect it from the mains. Allow the equipment to cool down.


- Clean the station screen with a glass cleaner or a damp cloth.
- Use a damp cloth to clean the casing and the tool. Alcohol can only be used to clean the metal parts.
- Periodically check that the metal parts of the tool and stand are clean so that the station can detect the tool's status.
- Maintain the tip surface clean and tinned prior to storage in order to avoid tip oxidation. Rusty and dirty surfaces reduce heat transfer to the solder joint.
- Periodically check all cables and tubes.
- Replace any defective or damaged pieces. Use original JBC spare parts only.
- Replace a blown fuse as follows:



**1.** Pull off the fuse holder and remove the fuse. If necessary use a tool to lever it off.

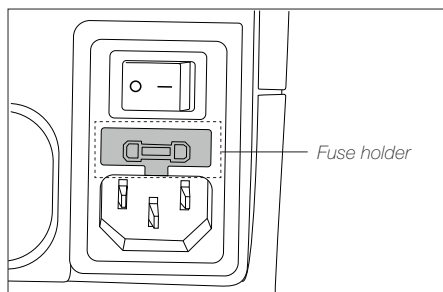

**2.** Press the new fuse into the fuse holder and replace it in the station.

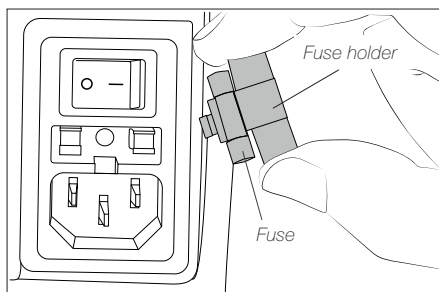

- Repairs should only be performed by a JBC authorized technical service.

## Safety



**It is imperative to follow safety guidelines to prevent electric shock, injury, fire or explosion.**

- Do not use the units for any purpose other than soldering or rework. Incorrect use may cause a fire.
- The power cord must be plugged into approved bases. Be sure that it is properly grounded before use. When unplugging it, hold the plug, not the wire.
- Do not work on electrically live parts.
- The tool should be placed in the stand when not in use in order to activate the sleep mode. The soldering tip or nozzle, the metal part of the tool and the stand may still be hot even when the station is turned off. Handle with care, including when adjusting the stand position.
- Do not leave the appliance unattended when it is on.
- Do not cover the ventilation grills. Heat can cause inflammable products to ignite.
- Avoid flux coming into contact with skin or eyes to prevent irritation.
- Be careful with the fumes produced when soldering.
- Keep your workplace clean and tidy. Wear appropriate protection glasses and gloves when working to avoid personal harm.
- Utmost care must be taken with liquid tin waste which can cause burns.
- This appliance can be used by children over the age of eight and also people with reduced physical, sensory or mental capabilities or lack of experience provided that they have been given adequate supervision or instruction concerning the use of the appliance and understand the hazards involved. Children must not play with the appliance.
- Maintenance must not be carried out by children unless supervised.

## Notes

This image shows a single sheet of white paper with horizontal ruling lines. The lines are evenly spaced and run across the width of the page. There are no margins, text, or other markings on the paper.



## Notes

This image shows a single sheet of white paper with horizontal ruling lines. The lines are evenly spaced and run across the width of the page. There are no margins, text, or other markings on the paper.

## Notes

This image shows a single sheet of white paper with horizontal ruling lines. The lines are evenly spaced and run across the width of the page. There are no margins, text, or other markings on the paper.

# Specifications

**NANE****2-Tool Nano Soldering Station**

Ref.: **NANE-9C** 100V 50/60Hz. Input fuse: 0.5A. Output: 8.5V

Ref.: **NANE-1C** 120V 50/60Hz. Input fuse: 0.5A. Output: 8.5V

Ref.: **NANE-2C** 230V 50/60Hz. Input fuse: 0.2A. Output: 8.5V

- Output Peak Power: 14W per tool
- Temperature Range: 90 - 450 °C / 190 - 840 °F
- Idle Temp. Stability (still air):  $\pm 1.5$  °C /  $\pm 3$  °F (meets and exceed IPC J-STD-001F)
- Temp Accuracy:  $\pm 3\%$  (using reference cartridge)
- Temp Adjustment:  $\pm 50$  °C /  $\pm 90$  °F (through station menu setting)
- Tip to Ground Voltage/Resistant: Meets and exceed  
ANSI/ESD S20.20-2014      IPC J-STD-001F
- Connections: USB-A / USB-B / Pedal connectors  
RJ12 connector for Robot
- Ambient Operating Temp: 10 - 50 °C / 50 - 122 °F
- Control Unit Dimensions: 140 x 170 x 125 mm  
(L x W x H) 5.51 x 6.69 x 4.92 in
- Total Net Weight: 2.45 kg / 5.40 lb
- Total Package Dimensions/Weight: 280 x 280 x 164 mm / 2.94 kg  
(L x W x H) 11.02 x 11.02 x 6.46 in / 6.48 lb

Complies with CE standards  
ESD Safe



---

### Warranty

JBC's 2 year warranty covers this equipment against all manufacturing defects, including the replacement of defective parts and labor.

Warranty does not cover product wear or misuse.

In order for the warranty to be valid, equipment must be returned, postage paid, to the dealer where it was purchased.

**Get 1 extra year JBC warranty by registering here:**  
**<https://www.jbctools.com/productregistration/>**  
**within 30 days of purchase.**

If you register, you will receive e-mail notifications about new software updates for your registered product.

---



This product should not be thrown in the garbage.

In accordance with the European directive 2012/19/EU, electronic equipment at the end of its life must be collected and returned to an authorized recycling facility.



[www.jbctools.com](http://www.jbctools.com)